Available Button Actions

Button Name	Description
No Action	Performs no action
Add Message to	Inserts text from the button's message box into the display,
Display	but the words are not spoken
Add Time/Date to	Displays the current date and time in the Speech Display
Display	Bar (SDB)
Apply Modifier	A modifier key is a special key on a keyboard that modifies
	the normal action of another key. (Caps Lock, Ctrl,
	Functions, Num Lock, Shift)
Backspace key	Deletes the last character in the display
Battery Status	Displays the current battery status in the SDB
Cancel Visit	Clears all remaining visits
Clear All Modifiers	Releases any Shift, Caps, Ctrl or Num Lock modifiers.
Clear Display	Clears the text in the SDB
Clear Last Word	Deletes the last word in the SDB
Find Word	Finds the path to a word you are looking for. When you tap
	a button and then tap Find Word, the path to the word is
	displayed in the SDB.
Grammar Action	Changes the existing word to the chosen grammatical form,
	add -ed, add -en, add -er, add -est, add -ing, Add -s
Help Signal	Triggers a loud attention-getting sound
Jump to Page	Takes you to a new page and takes you to the home page after a single hit
	after a single int
Load Display	Recalls text that had been saved and adds it to the display
Navigate	Takes you to a new page until you choose another button to
_	move away from that page
Navigate back	Returns to the previously accessed page
Navigate to home	Takes you to the home page
Open Android	Provides a button from vocabulary page to open a specific
Application	Android application. (not functional if working with a
	Closed/Dedicated system)
Play audio	Plays audio files. These are recordings of someone speaking
-	or sounds.
Play Library Audio	Plays an audio file such as music contained in the media
	library (Does not transfer with vocab file)

Button Name	Description
Play Library Video	Plays a video file contained in the media library (Does not
	transfer with vocab file)
Record Audio	Records audio files. These are recordings of someone
	speaking or sounds.
Repeat Last Spoken	Repeats the last spoken message
Save Display	Saves the text currently showing on the display for later use.
SDB – Copy Text	This action will copy all text within the Speech Display Bar
	and put a copy in the Clip Board
SDB – Paste Text	This will add text from the Clip Board to the end of the
	Speech Display Bar
SDB – Share Text	This action will copy all text from the Speech Display Bar to the chosen Social Network
Select Profile	Changes Settings to match the saved set of settings that was
	saved as a profile
Speak	Pronounces the SDB content
Speak Label Only	Speaks the label
Speak Last	Repeats the last spoken text
Sentence	
Speak Message	Speaks the message, but doesn't display the text
Only	
Speech Message	Types the button message in the SDB and pronounces it
Static Character	Displays the most probable character in compliance with the
Prediction (SCP)	current character displayed in the SDB, the assigned
	prediction order, and the static character list used by the
G IV. 1	dictionary compiler. You can adjust the prediction order.
Static Word	Displays the most probable word in compliance with the
Prediction (SWP)	current characters displayed in the SDB, the assigned
	selected prediction order, and the static word list used by the dictionary compiler (up to 60,000 words). The prediction
	order can be adjusted.
Stop	Stops the speech or audio file currently playing
Stop Library Audio	Stops the library audio
Store Text to	Stores text currently in the SDB to the next chosen button
Button	
Toggle Mute /	If the device is currently speaking a long message, selecting
Unmute	this button will not stop the speech but will stop the speech
	from being spoken aloud. Selecting the button again lets the
	text be heard.

Button Name	Description
Visit	Takes you to a new page and takes you back to the previous page after a single hit
Visit Exception	If you have one button on a Visit page that you don't want to return to the previous page, use a Visit Exception action to leave it on the page for one additional hit.
Volume Down	Turns down the volume.
Volume Up	Turns up the volume.