


Customizing Your Chat Device Part One

Devices, buttons, and features vary across devices, thus, make sure to note which buttons/options are on your device.

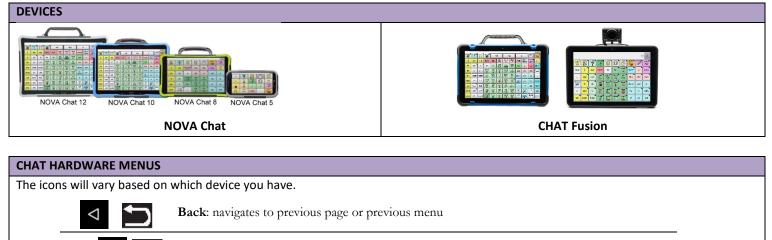

Home: navigates out of Chat software to tablet's home screen

Menu: allows you to determine which vocabulary file will be used, which augmentative options are enabled, how and when to speak messages, and how a wide variety of other options are configured.

CHAT MENUS

When you select the Menu button, a pop-up menu is displayed at the bottom of the screen. Edit Mode: turn editing on/off Settings: modify settings to device Library: listing of vocabulary files Help: system information & registration Word Finder: help finding a word (*must enable in Settings*) Lock: lock menus (*must enable in Settings*) SOFTWARE UPDATES: required to provide the best device possible. These fix bugs and add new features.

$Menu \Rightarrow Help \Rightarrow About$

- Learn how to update your device with a video tutorial <u>http://saltillo.com/training/</u>
- Wi-Fi updates available for unlocked/non-dedicated devices and newer devices.

NOTES ABOUT MENUS:

CUSTOMIZING SETTINGS	
	ound in the User's Manual, Getting Started Guide, and Help Index on Device –
– To find th	ne Settings menu, tap the Menu button and select Settings –
	INPUT SETTINGS
Adjust Timing	Menu \Rightarrow Settings \Rightarrow Input \Rightarrow Timing \Rightarrow Select Desired Button Timing
	(described below) \Rightarrow Enable \Rightarrow Set Time
	• Acceptance Time: length of time to hold a button down before it
	activates
	• Release Time : length of time required to wait between button activations
	Activate on release: if checked, button will not activate until finger is lifted off
	button. There is no timing adjusting required for this setting.
Beep on Button Press	Menu \Rightarrow Settings \Rightarrow Input \Rightarrow Beep on Button Press
	If checked, provides auditory feedback – button will beep when touched.
Draw Button Press	Menu \Rightarrow Settings \Rightarrow Input \Rightarrow Draw Button Press
	o If checked, provides visual feedback – button will light up red when
	touched.
	Gradient Fill must be DISABLED (found in Style Settings)
Notes about Input Settings:	
Change Vision Synthesizor	SPEECH OUTPUT SETTINGS
Change Voice Synthesizer	Menu \Rightarrow Settings \Rightarrow Speech Output \Rightarrow Voice \Rightarrow Synthesizer
	Pop-up menu appears with available voice synthesizers \Rightarrow Select a
	synthesizer (Ivona or Acapela)
Change Voice	Menu \Rightarrow Settings \Rightarrow Speech Output \Rightarrow Voice \Rightarrow Voice Settings
	• Select the Voice dropdown \Rightarrow Select a voice
	Adjust as needed (rate for Ivona and rate & pitch for Acapela) \Rightarrow Select
	Save
Notes about Speech Output Se	ettings:
	STYLE SETTINGS
Change Font Style in SDB	$Menu \Rightarrow Settings \Rightarrow Style \Rightarrow Font \Rightarrow Font$
	Select desired font style from pop-up menu.
Change Font Size in SDB	$Menu \Rightarrow Settings \Rightarrow Style \Rightarrow Font \Rightarrow Font Size$
Change Background Color	Menu \Rightarrow Settings \Rightarrow Style \Rightarrow Background Color
in SBD	Select desired color from pop-up menu.
Change Text Color in SDB	$Menu \Rightarrow Settings \Rightarrow Style \Rightarrow Text Color$
	Select desired color from pop-up menu.
Notes about Style Settings:	
	SYSTEM SETTINGS
Adjust Screen Brightness	Menu \Rightarrow Settings \Rightarrow System \Rightarrow Display Settings \Rightarrow Brightness
	Slide bar to desired screen brightness.
Adjust Screen Timeout	Menu \Rightarrow Settings \Rightarrow System \Rightarrow Display Settings \Rightarrow Screen Timeout

Notes about System Settings:

DATA LOGGING SETTINGS	
Turn Data Logging On/Off	Menu ⇒ Settings ⇒Data Logging ⇒ Enable Data Logging See Device User Guide or video tutorials http://saltillo.com/training for more info
Save Data to File	 Menu ⇒ Settings ⇒Data Logging ⇒ Save Data to File o If not using Realize Language, the "Person" will be "Default Person". Otherwise, you can select which person's data you want to transfer to a file. o Choose the timeframe you want o Since last save o Specific Date Range – From XX to XX o All o Select Save to File o Then, have a couple options about what to do with the file: can upload into Realize Language or download to your computer and examine data in Microsoft, for example
Clear Log Notes about Data Logging Se	Menu ⇒ Settings ⇒Data Logging ⇒ Clear Data Can select which user's (if you have multiple) data you want to clear. • A pop-up box will appear confirming you want to "Clear log for", select yes to clear the log. ettings:

Selecting a Vocabulary File

Tap the Menu

Then select Library

- All available vocabularies will be listed alphabetically.
- Locks indicate an original Saltillo file.
 - You CANNOT edit original files. You must duplicate it.



Duplicating a Vocabulary File

- Tap on the file you want to copy, select Duplicate.
- Type a name for the file. It is recommended to leave the vocabulary file name (e.g., MultiChat 15_Dave). **Save**
- o Tap on the newly created file. **Open.**



CUSTOMIZING VOCABULARY

Make a Plan - Where to Start?

Suggested places to start: social page, people, about me, and favorites (food, drinks, toys, books)
 See what's working/not working, then go back and customize

Edit Mode

• You will need to be in **Edit Mode** in order to make any changes to the vocabulary file.

$\circ \quad \mathsf{Menu} \Rightarrow \mathsf{Edit} \ \mathsf{Mode}$

• Edit Mode will appear in red at the bottom of the screen, along with the name of the page (in brackets) you are currently editing.

DIACKEIS) you a		currentiy editing.
GENERAL TAB when Editing a B	utto	n
Change Button Label or	0	Edit the label and/or message by tapping in the box and typing.
Message		o Label: the words on the button
		 Message: the words spoken by the device
		When finished, choose Save .
Change Image on a Button	0	Using Symbol Library
		o Select Find . Spell item to find.
		o Select Search
		o Drag the list up and down. Tap on the desired image. Select Save .
	0	Take a Picture for Button Image
		 Select Camera. Take the picture in horizontal view. Select Save.
		o Name the image. Select Save .
		If needed, add a label and message to the button. Select Save.
Make a Button Visible	0	By default all buttons are visible (i.e. the box is checked)
	0	Uncheck the box to hide a button.
		When finished, choose Save .
		Note there is another way to hide multiple buttons at time.

Notes about General Tab:

STYLE TAB when Editing a Butto	
Change a Button's Font	 Select the Style tab on top. The style properties appear
	o Make the changes you want.
	When finished, choose Save .
	 Font Style-select from the drop down box
	 Font Size-increase or decrease the size using the +/-
	o Font Effects-can make the font
	Bold, Italic, Underline
Change Colors on a Button	 Select desired color from pop-up box with color options.
	When finished, choose Save .
	Body=background color of the button
	Font=font color
	Border=outline border of the button
Change a Button's Border	o Choose from 1-7 for the width. (7 is the widest, boldest.)
Width	• Highlighting the button: Select Border. Select the color. (Usually a bolder
	color than the button's background and surrounding buttons.)
Try highlighting instead of	Increase Border Width.
hiding!	When finished, select Save .
Making a Button Transparent	 By default, all buttons are NOT Transparent.
	o Check the box to make a button transparent .
	When finished, choose Save .
	Can be used when creating visual scenes.
Change Label on Top	 All buttons have the label on top by default.
	o Uncheck the box. Label will appear on the bottom of the button.
	When finished, choose Save .

ACTIONS TAB when Editing a	
Speech Message	 Buttons are created with Speech Message as the action. This action makes the button speak what is written in the "Message" box on the General tab AND add the "Message" to the speech display bar.
Navigate to a Page	 This action makes the button go to another page. There are several steps to Navigate to a new page. Select Navigate from the drop down menu of action choices. Select animation desired (the default setting is "No animation"); there are several options. Then, select the page you want the button to Navigate to. A menu of available pages will appear.
Visit a Page	 Similar to Navigate, but only stay on selected page for one button press before returning to previous page. Select Visit from the drop down menu of action choices. Select animation desired (the default setting is "No animation"); there are several options. Then, select the page you want the button to Visit to. A menu of available pages will appear.
Notes about ACTIONS TAB:	
MORE EDITING OPTIONS	Allows you to change the size of the button bigger/smaller
MORE EDITING OPTIONS Change Button Size	Allows you to change the size of the button bigger/smaller. Menu \rightarrow Edit Mode
	Menu \Rightarrow Edit Mode
	Menu ⇒ Edit Mode o Select Change Button Size
Change Button Size	Menu ⇒ Edit Mode o Select Change Button Size
Change Button Size	 Menu ⇒ Edit Mode o Select Change Button Size o Adjust horizontal and vertical cells to desired size.
	Menu ⇒ Edit Mode o Select Change Button Size o Adjust horizontal and vertical cells to desired size. Will permanently remove the button from the page.
Change Button Size	Menu ⇒ Edit Mode o Select Change Button Size o Adjust horizontal and vertical cells to desired size. Will permanently remove the button from the page. Menu ⇒ Edit Mode
Change Button Size Remove Button from Page	Menu ⇒ Edit Mode o Select Change Button Size o Adjust horizontal and vertical cells to desired size. Will permanently remove the button from the page. Menu ⇒ Edit Mode o Select Remove Button from Page
Change Button Size Remove Button from Page Copy and Paste a Button	Menu ⇒ Edit Mode o Select Change Button Size o Adjust horizontal and vertical cells to desired size. Will permanently remove the button from the page. Menu ⇒ Edit Mode o Select Remove Button from Page Menu ⇒ Edit Mode o Press and hold on the button you want to copy. Select Copy Button.
Change Button Size Remove Button from Page Copy and Paste a Button	Menu ⇒ Edit Mode o Select Change Button Size o Adjust horizontal and vertical cells to desired size. Will permanently remove the button from the page. Menu ⇒ Edit Mode o Select Remove Button from Page Menu ⇒ Edit Mode o Press and hold on the button you want to copy. Select Copy Button. Press and hold on the new location. Select Paste Button.
Change Button Size Remove Button from Page	Menu ⇒ Edit Mode ○ Select Change Button Size ○ Adjust horizontal and vertical cells to desired size. Will permanently remove the button from the page. Menu ⇒ Edit Mode ○ Select Remove Button from Page Menu ⇒ Edit Mode ○ Press and hold on the button you want to copy. Select Copy Button. Press and hold on the new location. Select Paste Button. Menu ⇒ Edit Mode ○ Press and hold on the new location. Select Paste Button. Press and hold on the new location. Select Paste Button. Oreate or edit button with all changes that are desired. ○ Press and hold on the button, select Use Same Button
Change Button Size Remove Button from Page Copy and Paste a Button	Menu ⇒ Edit Mode ○ Select Change Button Size ○ Adjust horizontal and vertical cells to desired size. Will permanently remove the button from the page. Menu ⇒ Edit Mode ○ Select Remove Button from Page Menu ⇒ Edit Mode ○ Press and hold on the button you want to copy. Select Copy Button. Press and hold on the new location. Select Paste Button. Menu ⇒ Edit Mode ○ Press and hold on the button you want to copy. Select Copy Button. Press and hold on the new location. Select Paste Button. Menu ⇒ Edit Mode ○ Create or edit button with all changes that are desired. ○ Press and hold on the button, select Use Same Button ○ Then navigate to page where you want to put second button.
Change Button Size Remove Button from Page Copy and Paste a Button Use Same Button	Menu ⇒ Edit Mode ○ Select Change Button Size ○ Adjust horizontal and vertical cells to desired size. Will permanently remove the button from the page. Menu ⇒ Edit Mode ○ Select Remove Button from Page Menu ⇒ Edit Mode ○ Press and hold on the button you want to copy. Select Copy Button. Press and hold on the new location. Select Paste Button. Menu ⇒ Edit Mode ○ Press and hold on the button you want to copy. Select Copy Button. Press and hold on the new location. Select Paste Button. Oreate or edit button with all changes that are desired. ○ Press and hold on the button, select Use Same Button ○ Then navigate to page where you want to put second button. ○ Press hold button space, select Use Same Button.
Change Button Size Remove Button from Page Copy and Paste a Button	Menu ⇒ Edit Mode • Select Change Button Size • Adjust horizontal and vertical cells to desired size. Will permanently remove the button from the page. Menu ⇒ Edit Mode • Select Remove Button from Page Menu ⇒ Edit Mode • Press and hold on the button you want to copy. Select Copy Button. Press and hold on the new location. Select Paste Button. Menu ⇒ Edit Mode • Press and hold on the button you want to copy. Select Copy Button. Press and hold on the new location. Select Paste Button. Menu ⇒ Edit Mode • Create or edit button with all changes that are desired. • Press and hold on the button, select Use Same Button • Then navigate to page where you want to put second button. • Press hold button space, select Use Same Button. Menu ⇒ Edit Mode
Change Button Size Remove Button from Page Copy and Paste a Button Use Same Button	Menu ⇒ Edit Mode • Select Change Button Size • Adjust horizontal and vertical cells to desired size. Will permanently remove the button from the page. Menu ⇒ Edit Mode • Select Remove Button from Page Menu ⇒ Edit Mode • Press and hold on the button you want to copy. Select Copy Button. Press and hold on the new location. Select Paste Button. Menu ⇒ Edit Mode • Press and hold on the button you want to copy. Select Copy Button. Press and hold on the new location. Select Paste Button. Menu ⇒ Edit Mode • Create or edit button with all changes that are desired. • Press and hold on the button, select Use Same Button • Then navigate to page where you want to put second button. • Press hold button space, select Use Same Button. • Press and hold on the button, whose style (e.g., border, background
Change Button Size Remove Button from Page Copy and Paste a Button Use Same Button	Menu ⇒ Edit Mode • Select Change Button Size • Adjust horizontal and vertical cells to desired size. Will permanently remove the button from the page. Menu ⇒ Edit Mode • Select Remove Button from Page Menu ⇒ Edit Mode • Press and hold on the button you want to copy. Select Copy Button. Press and hold on the new location. Select Paste Button. Menu ⇒ Edit Mode • Press and hold on the button you want to copy. Select Copy Button. Press and hold on the new location. Select Paste Button. Menu ⇒ Edit Mode • Create or edit button with all changes that are desired. • Press and hold on the button, select Use Same Button • Then navigate to page where you want to put second button. • Press hold button space, select Use Same Button. Menu ⇒ Edit Mode

CUSTOMIZING A CLIENT'S DEVI	CF
PRONUNCIATIONS	
Change/Add Pronunciations	 Menu ⇒ Settings ⇒ Speech Output ⇒ Voice ⇒ Pronunciations A list of default words appears. o To add a word select Menu ⇒ New o Type the word as it should be spelled in the "Pronounce" box. o Then in the "Pronounce as" box, spell phonetically. o Select Pronounce It to hear it and then Save when satisfied
Notes about Pronunciations :	5 select nonounce it to hear it and then save when satisfied
HIDE MODE	
Turn Hide Mode On/Off	Turn Hide Mode On
	 Menu ⇒ Edit Mode ⇒ Hide Mode On some devices, a person may first have to select More to see the Hide Mode option. A green check mark will appear to indicate Hide Mode is turned on. Turn Hide Mode Off Menu ⇒ Hide Mode
Hide/Show Buttons	 o The green check mark will disappear when Hide Mode is turned off Menu ⇒ Edit Mode ⇒ Hide Mode (may have to select more ⇒ Hide Mode) You must hide each page at a time. Once in hide mode, you have three options: o Select buttons one by one to either hide or show them. o Select Menu ⇒ Hide All to hide all buttons on the page. o Select Menu ⇒ Show All to show all buttons on the page. To exit Hide Mode, select Menu, uncheck Hide Mode or select Edit Mode.
Notes about Hide Mode:	
WORD FINDER	
Add Word Finder to Menu Bar	Menu \Rightarrow Settings \Rightarrow Word Finder \Rightarrow Show Menu Item
Use Word Finder in Vocabulary	 There are several ways to use Word Finder. 1) Menu ⇒ Word Finder ⇒ Type the word. Choose Done. Pathway(s) will appear. 2) Go to Keyboard in the vocabulary. Type the word. Choose Find Word on the keyboard Pathways(s) will appear in the speech display bar (SDB). a) You can create a button in the vocabulary that will Find a Word. The word's pathway will appear in the SDB.
Using Word Finder on a Button	 Will need to configure Word Finder settings in the Settings menu. Menu ⇒ Settings ⇒ Word Finder ⇒ Flip Interval Adjust how long each pathway for a given word will appear in the SDB using the +/-
Notes about Word Finder:	

MENU LOCK	
Set Menu Lock Password My password:	 Menu ⇒ Settings ⇒ Menu Lock ⇒ Enable Menu Lock. o Enter and confirm the password. It is case sensitive. Choose Save.
Lock/Unlock Menu Bar	Menu \Rightarrow Settings \Rightarrow Lock. Access to menu bar is now "locked". Menu \Rightarrow Settings \Rightarrow Unlock \Rightarrow Enter the password \Rightarrow OK. If you forget the password, enter BOSCO to override it, then re-set (above).
Notes about Menu Lock:	
KIOSK MODE	
Turn Kiosk On/Off (unlocked devices only) <i>My password:</i>	 Menu ⇒ Settings ⇒ System ⇒ Kiosk ⇒ Enable Kiosk Mode o If you want to set a password, do so first before enabling Kiosk. The password for Kiosk, can be the same or different from the Menu Lock Password. If you forget the password, enter bazinga to overwrite it.
Notes about Kiosk Mode:	
SALTILLO RESOURCES	
SALTILLO RESOURCES Join our Newsletter http://saltillo.com/community	Watch Client and How To Videos <u>http://youtube.com/saltillocorp</u>